
FabricAir

Type 11

Installation Manual

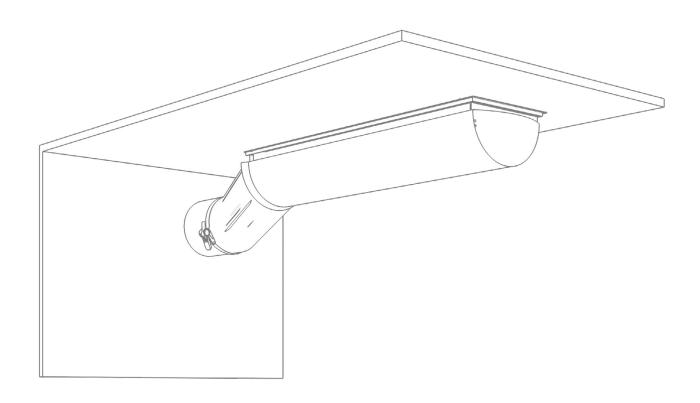


Type 11 is a suspension method for half-round and semi-oval fabric ducts using flush-mounted T-Rail. Air may be supplied from the end or from the top. T-Rail may be attached to any type of flat ceiling. Fabric System attaches to the T-Rail by way of a bulb edge (fabric wrapped silicone cord) that presses into place.

Content

1.0	OPENING PACKAGE	3
	1.1 Understanding components table	
	1.2 Type 11 suspension components	
2.0	SUSPENSION INSTALLATION	
	2.0 Suspension installation	6
	2.1 Mounting T-Rail	
	2.2 Mounting T-Rail for branches	7
	2.3 Bendings and elbows	
	2.4 Detailed suspension installation	
3.0	INSTALLING THE FABRIC	10
	3.1 Connection to sheet metal part with fixing strap	10
	3.2 Fixing straps	10
	3.3 Installation of duct on T-Pail	11


1.0 OPENING PACKAGE

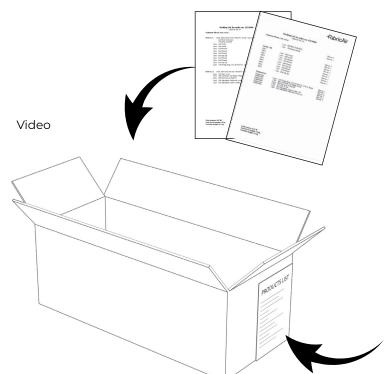

Box 1 includes all project documentation:

- System Drawing(s)
- Installation Guide
- Packing List (by box)
- Packing List (by positions)

Box number and contents list visible on external box label.

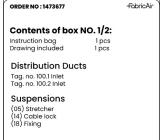

FabricAir Packing List for order no. 1572946 1 pcs INSTRUCTION BAG 1 pcs - Drawing included Pos No. 100 100.1 100.2 1 pcs Inlet round 1 pcs Inlet round 1 pcs Duct Round 1 pcs Duct Round Box no. 1 Box no. 1 Box no. 1 Box no. 1 100.3 100.4 1 pcs Duct Round 1 pcs Duct Round 1 pcs End cap Zip 1 pcs Duct Round 1 pcs Duct Round 1 pcs End cap Zip Box no. 1 100.5 100.6 100.7 100.8 100.9 (18) Fixing Strap, Y/Z, Ø710/27.9", 2,46 m, Black (06) Connector, SS Metal, H-Rail (08) End Lock, H-Rail SS (21) Hail, H, 2m (38) Adjustable Cable 2 meter, SS (36) Adjustable Cable lock, H-rail, SS Total volume: 0.07 M^a Total Gross weight: 12 kg Total Net weight: 9.3 kg

		-F abricAır						
	Packing List for order no. 1572946 Listed by Box no.							
Customer PO	no.: Nate Verbal							
BOX no. 1: SIZE: 590x210x275 mm, WEIGHT: Gross 7 kg. Net 5.9 kg.								
	INSTRUCTION BAG							
	- Drawing included							
	Inlet round	Tag No. 100.1						
	Inlet round	Tag No. 100.2						
	Duct Round	Tag No. 100.3						
	Duct Round Duct Round	Tag No. 100.4 Tag No. 100.5						
	End cap Zip	Tag No. 100.6						
	Duct Round Duct Round	Tag No. 100.7 Tag No. 100.8						
	End cap Zip	Tag No. 100.9						
	(18) Fixing Strap, Y/Z, Ø710/27.9", 2,46 m, Black	Suspension						
2 000	(10) Tixing Stap, 112, 57 10/27 5 , 2,40 III, State	Suspension						
BOX no. 2:	SIZE: 2070x150x100 mm, WEIGHT: Gross 5 kg. Net 3.45 kg.							
4 pcs	(21) Rail, H, 2m	Suspension						
	(06) Connector, SS Metal, H-Rail	Suspension						
	(08) End Lock, H-Rail SS	Suspension						
	(36) Adjustable Cable lock, H-rail, SS	Suspension						
7 pcs	(38) Adjustable Cable 2 meter, SS	Suspension						
Total volume:								
Total Gross weight: 12 kg Total Net weight: 9.3 kg								

- There are two packing lists by box and by position. Each box may contain either suspension components or ducting. Each duct section/component has a Tag number (Tag No. XXX.X). Suspension elements have part ID numbers. Example: (21) T-Rail, 2 m. In this case, (21) is part ID.
- Tag numbers are marked in assembly sequence. Assembly of ducting should start with Tag No. XXX.1 and continue accordingly.

1.1 Understanding components table (located on system drawing)

COMPONENTS												
	Fabric	Color	Flow model			Suspension						
Tag#			Primary	Placement	Secondary	Туре	Strap length	Material				
350404600025	Combi 70	Black 3004			FabFlow		0	GV				
100.1	Combi 70	Black 3004			FabFlow		0	GV				
100.2	Combi 70	Black 3004	SonicFlow SonicFlow SonicFlow SonicFlow	2:00 3:00 4:00 5:00 6:00	FabFlow	Type 01 AiO	50 mm [2"]	GV				

THE CHART SHOWN ABOVE IS AN EXAMPLE

Tag#: the unique number for that section, this is the identifying/unique number for that section.

Tag 3504..##..25: this part is the FabricAir flow straightener that helps manage turbulence and can be zipped into any joint.

Fabric: the fabric selected for this project.

Color: the color selected (standard meaning to select from the standard color chart for that fabric).

Flow model primary: primary dispersion method.


Placement: position of the holes; direction of airflow based on looking in the direction of airflow with the air hitting you from behind.

Flow model secondary: FabFlow for permeable fabrics.


Suspension type: the suspension model selected for the project.

Strap length: the length of the strap from the top of the duct to the suspension.


1.2 Type 11 suspension components (located on packing lists)

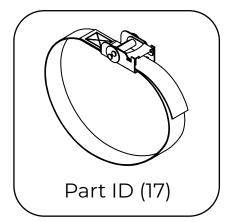


Fixing strap for duct Ø < 508 mm [20"]

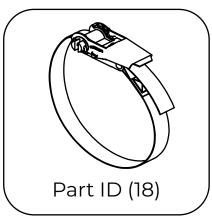

Fixing strap for duct Ø>508 mm [20"]

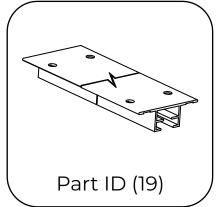


T-Rail profile

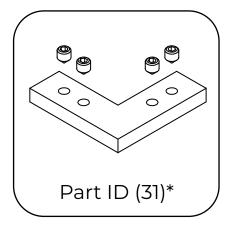


Angle plate



Support connector

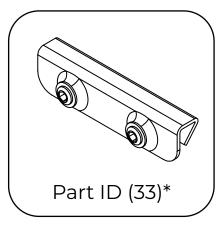

Connector for T-Rail

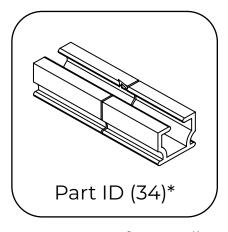


Connector for T-Rail


^{*}Optional hardware, not necessary for standard installation, only included for building rigid frames prior to mounting on ceiling

2.0 SUSPENSION INSTALLATION


2.1 Mounting T-Rail

- Connector for T-Rail shall be supplied by FabricAir.
- T-Rail is produced in 2 meter sections. T-Rails can be cut to the desired length as necessary.
- These suspension systems must be mounted flush to the ceiling. They cannot be suspended below the structure using T-Rail.
- Center-line of T-Rails should be spaced according the the diameter of the duct as shown on the supplied system drawings.

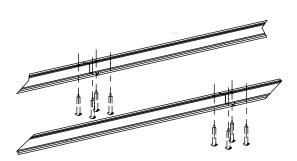

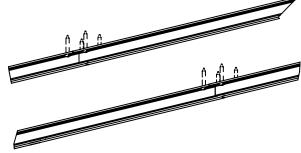


For maximum stability, T-Rails must be secured to the structure on both sides of each end, with a minimum of four fasteners per rail. Fasteners supplied by others.

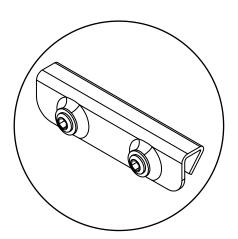


Connector slides into groove of T-Rail and is fixed by two hex bolts.

T-Rail connectors use 3 mm hex key.

- · Utilize chalk lines and/or lasers to ensure straight installation.
- T-Rails are not pre-drilled, allowing for contractor flexibility in determining the best location for fastening to the structure.
- The system may be attached to the T-Bar framework of suspended ceiling for types 11, 11A and 12. The T-Rails should be securely affixed to the T-Bars at intervals of 600 mm [2'] or 1200 mm [4'].
- It is of paramount importance to ensure compliance with the weight load specifications of the ceiling system prior to installation, as failure to adhere to these guidelines can result in structural integrity issues. Thus, it is essential to thoroughly review and verify the weight load capacity of the system to ensure safe and secure implementation.

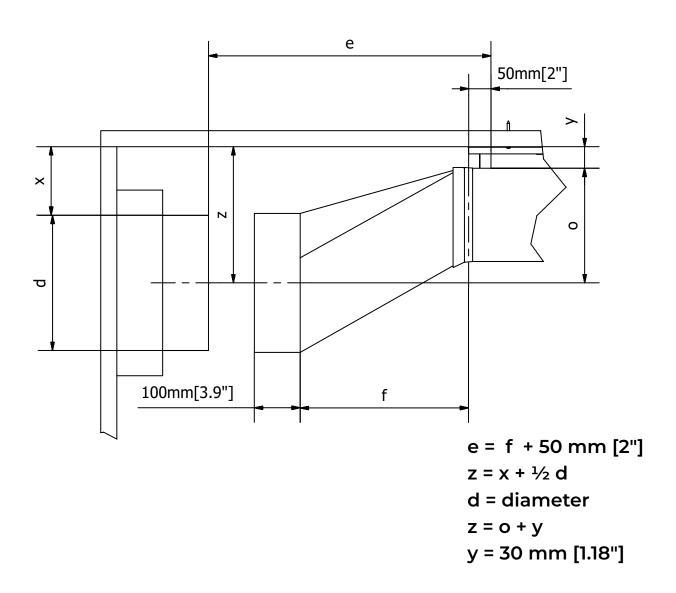



2.2 Mounting T-Rail for branches

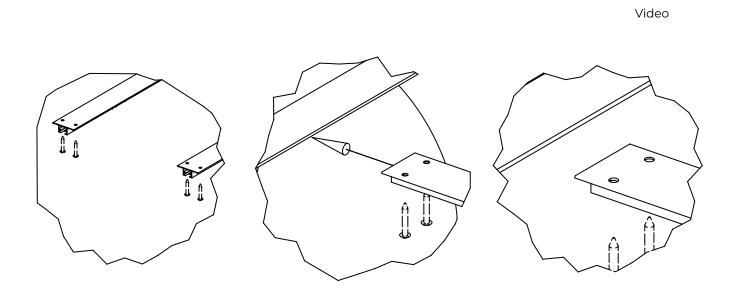


2.3 Bendings and elbows


90° Elbow

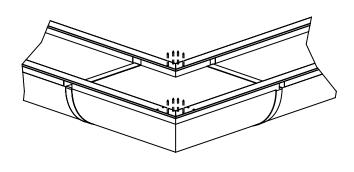

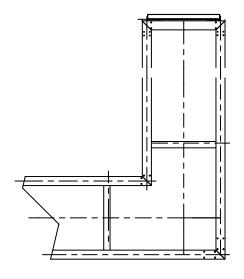



45° Elbow

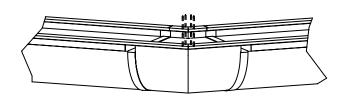

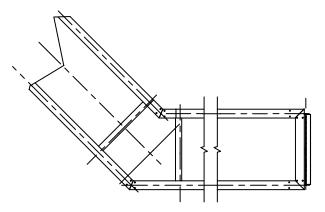

5° Elbow

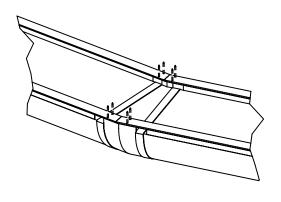


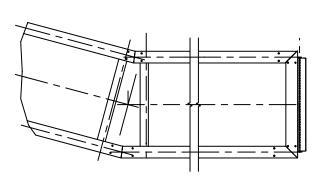


• Systems designed with elbows are delivered with entire T-Rail system cut to length and mitered as necessary.

2.4 Detailed suspension installation details

Use QR code for more detailed information for each type.

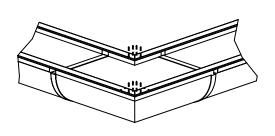


Bendings and elbows All degrees and sizes

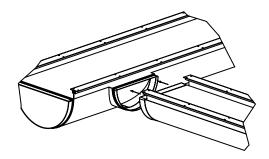


BranchesTop/center/bottom
aligned

Drawings

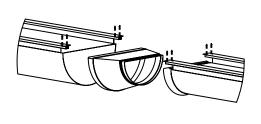

ReductionsTop/center/bottom
aligned

Drawings

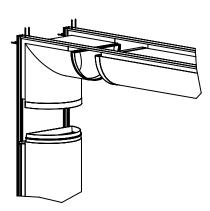


Vertical duct suspension methods

Drawings

Drawings


3.0 INSTALLING THE FABRIC

3.1 Connection to sheet metal part with fixing strap

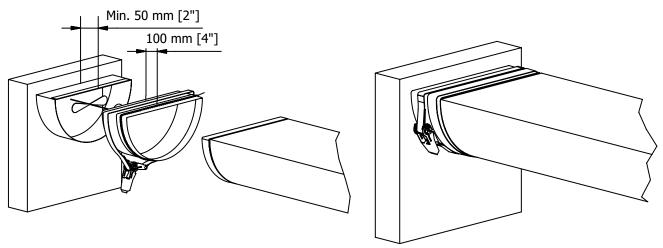

3.2 Fixing straps


Part ID (17) Duct Ø < 510 mm [20"]

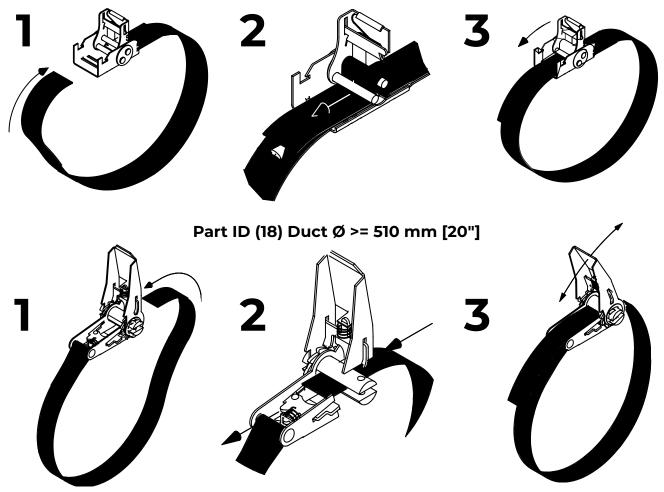

3.3 Installation of duct on T-Rail

1

Press bulb-edge into T-Rail along the entire perimeter.

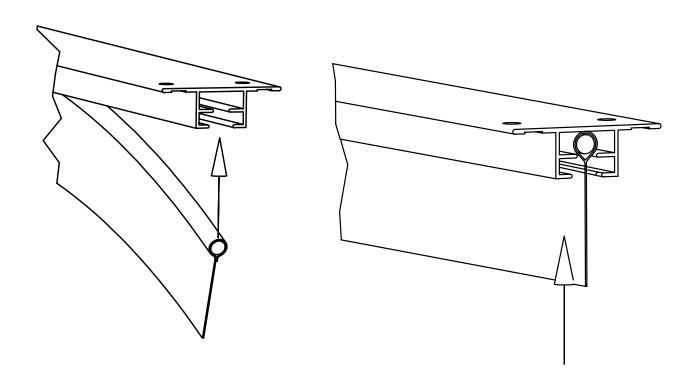

- · Use a smooth metal object to press bulb edge into the T-Rail.
- · If provided, insert locking rail into T-Rail.

