

Installation of FabricAir® Taut Endcap

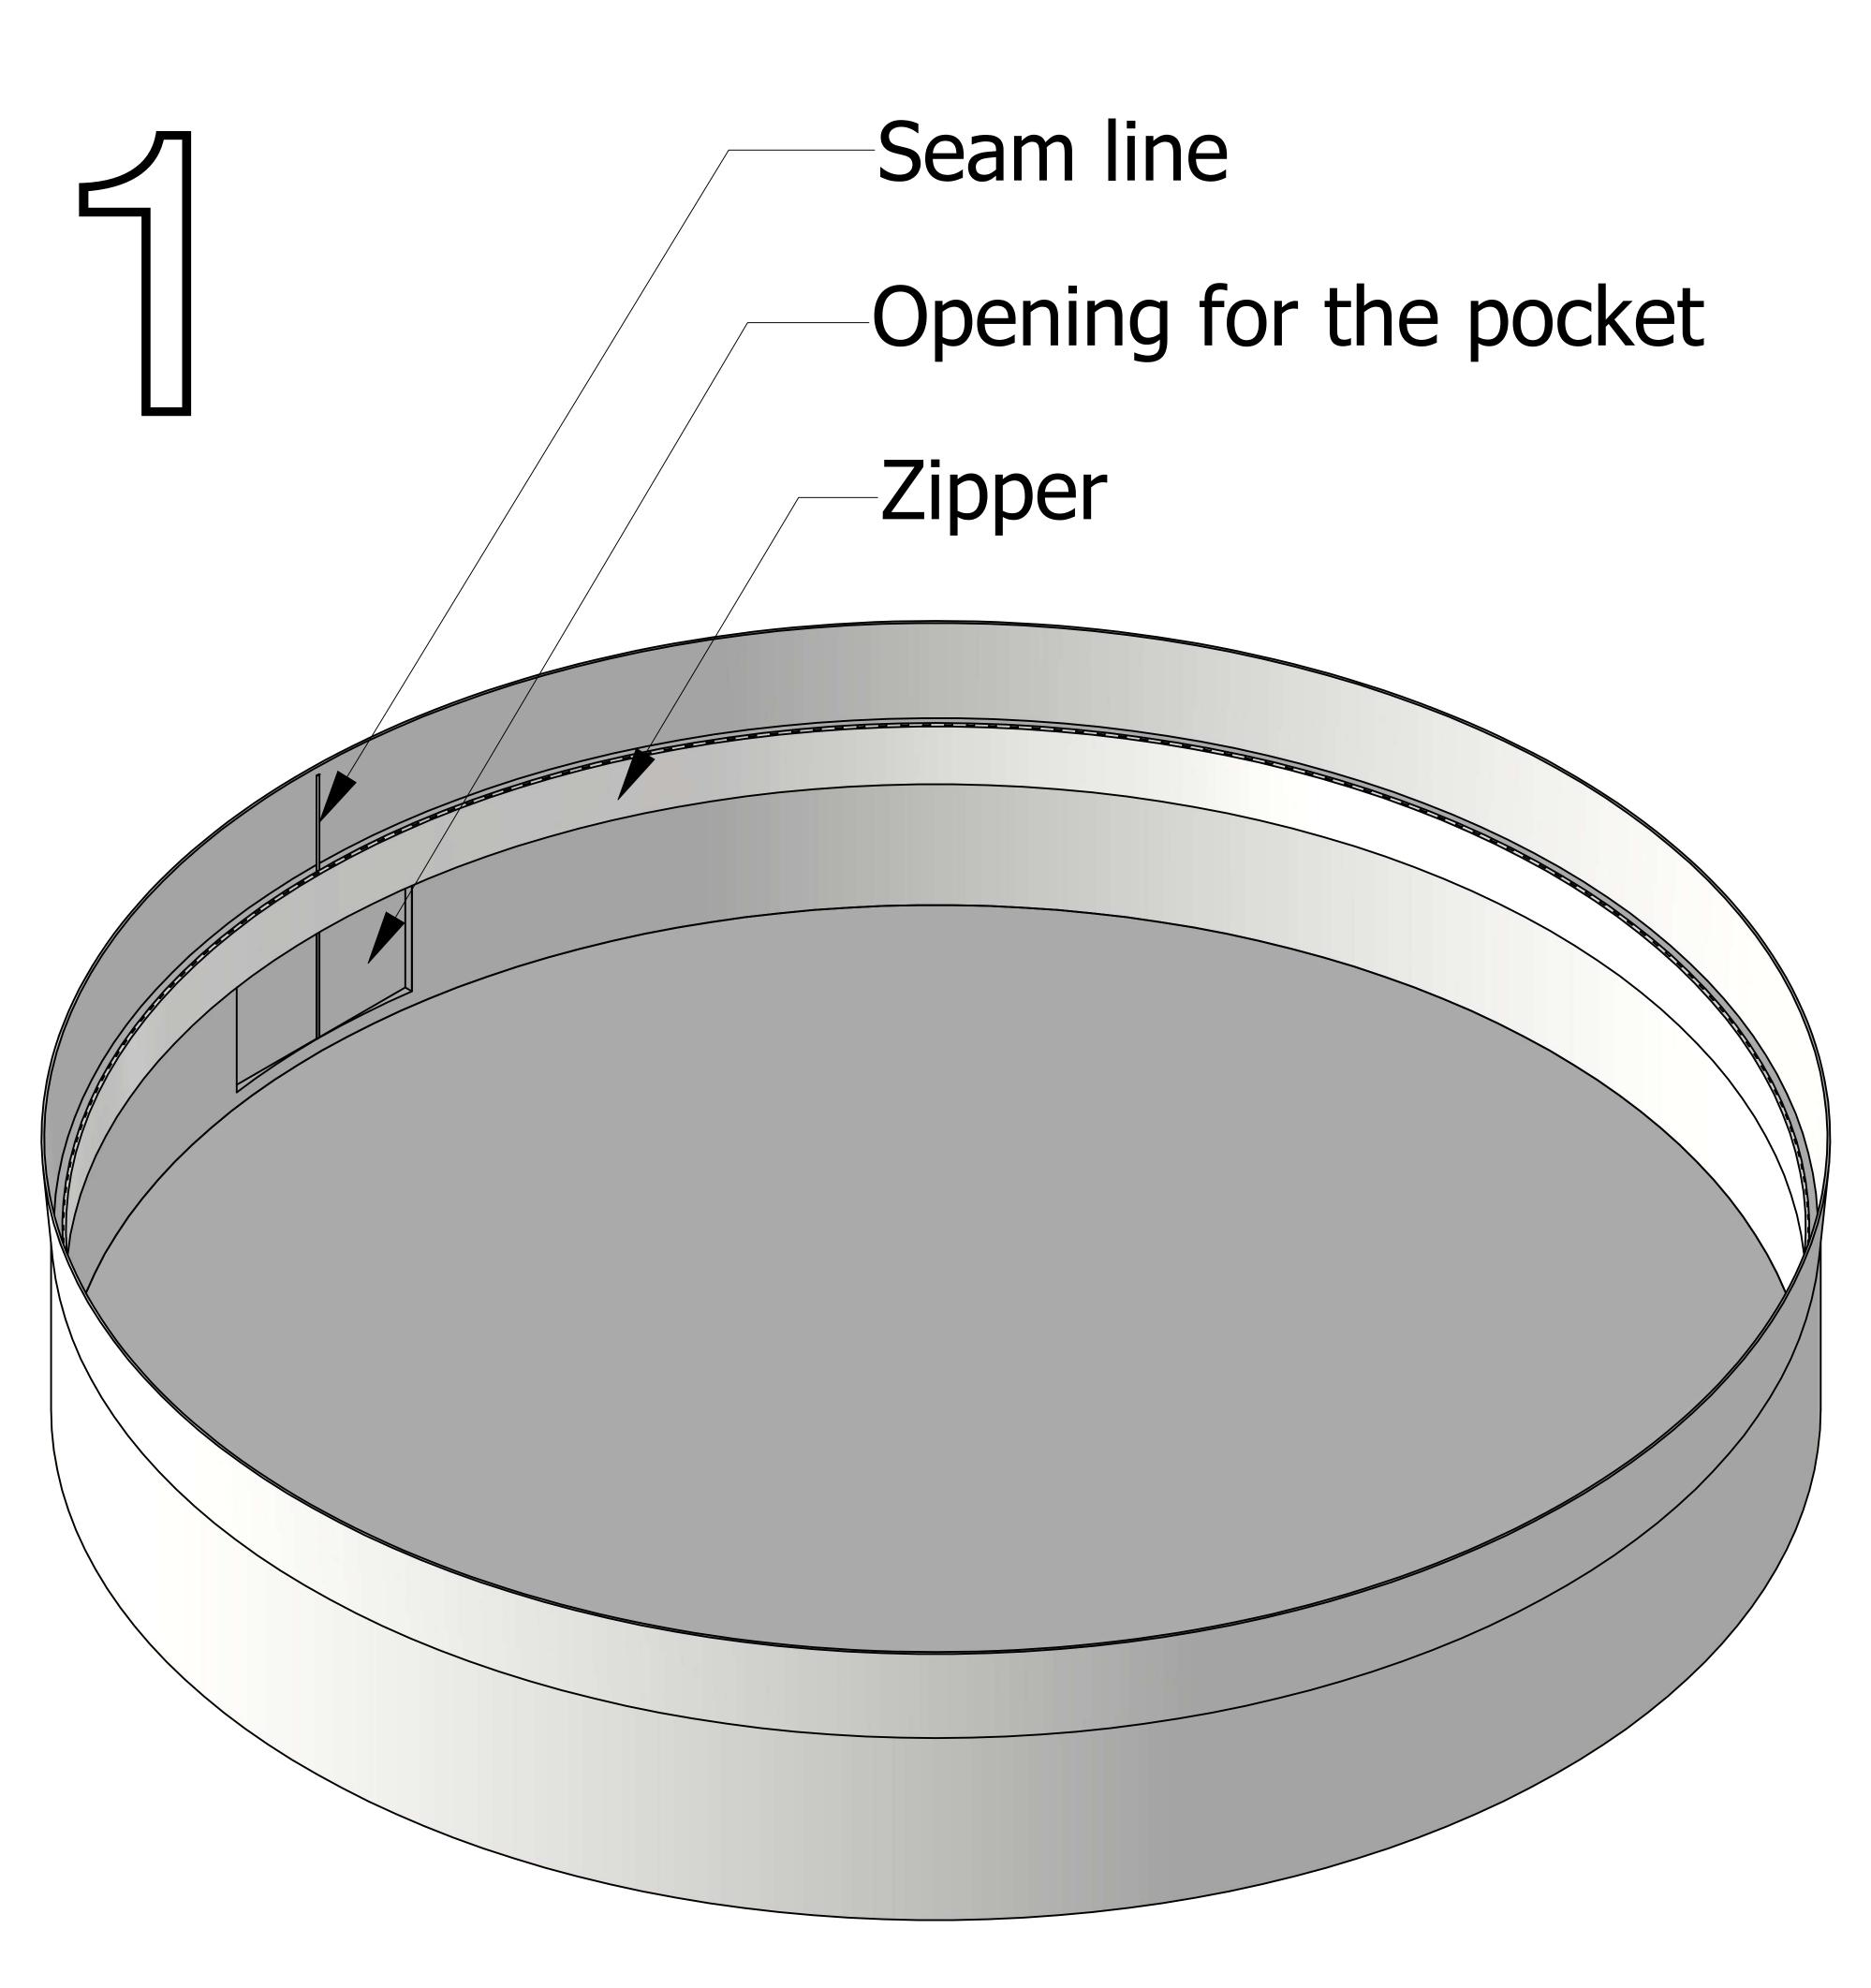


Lay the end cap flat on a clean surface

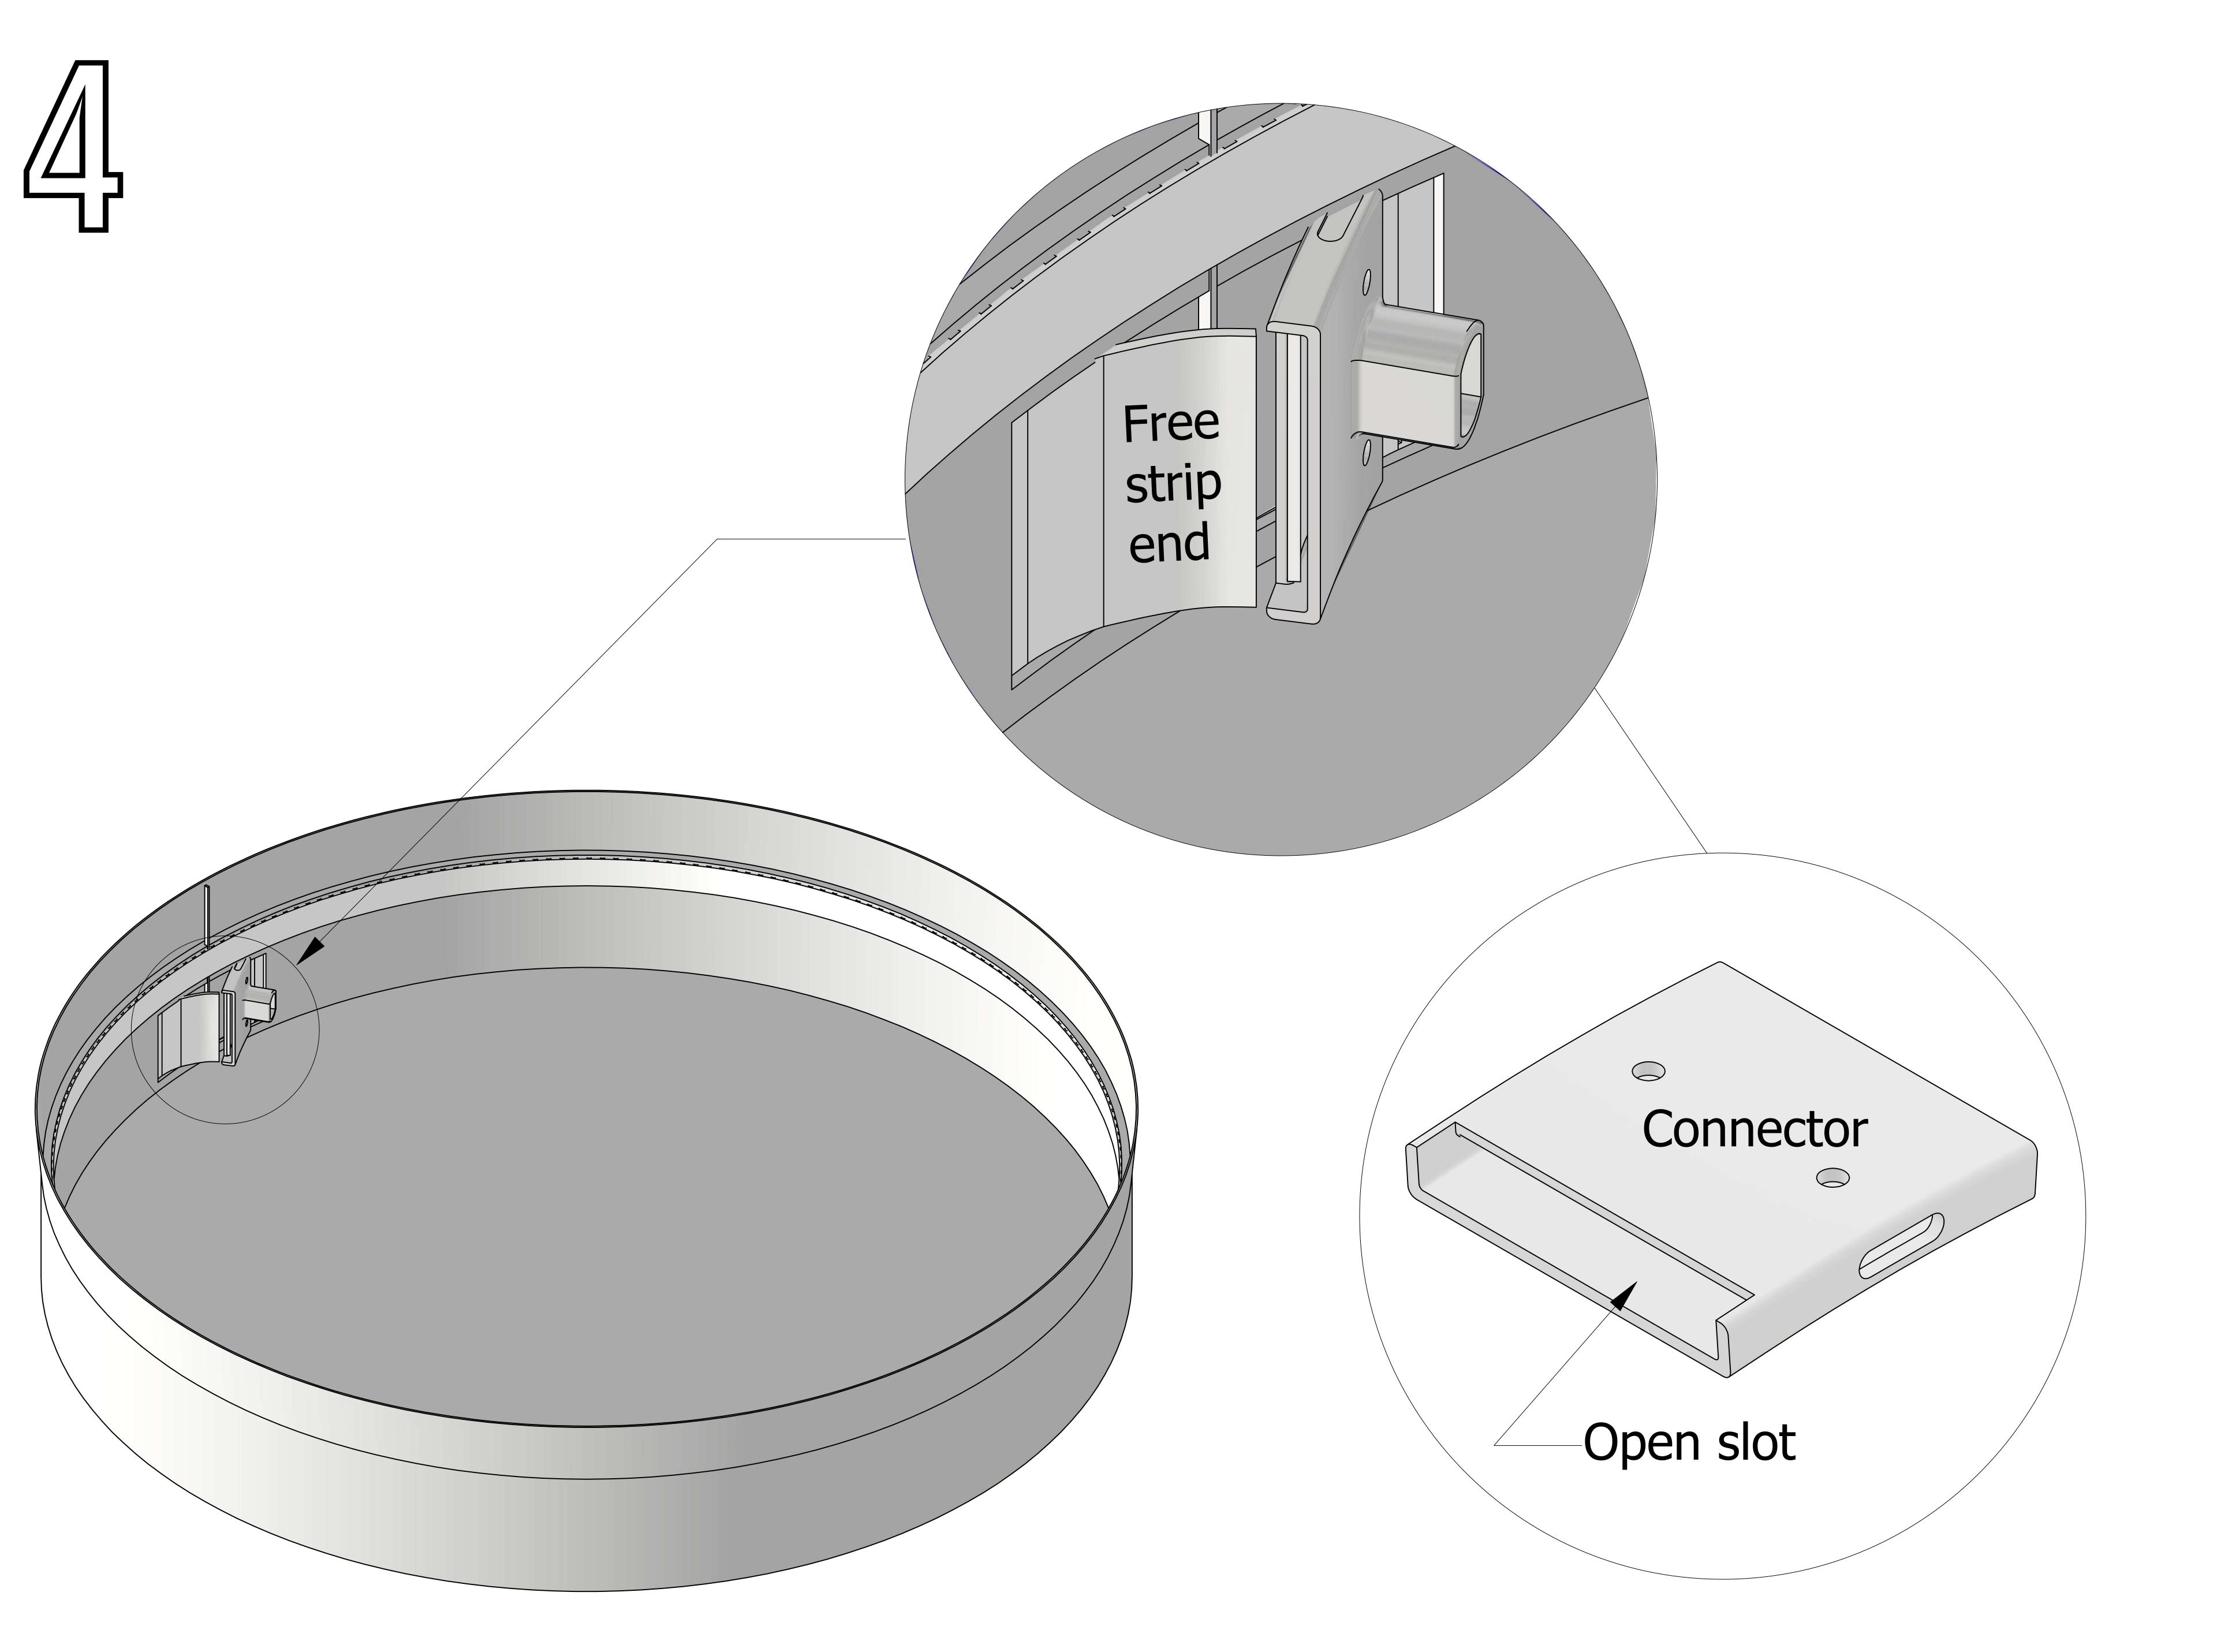

Put connector on the aligned strip end with the open slot towards the free strip end





Type 1 Type 1 FabricAir[®] Installation Drawing 2003-G049-000 (2022- September)

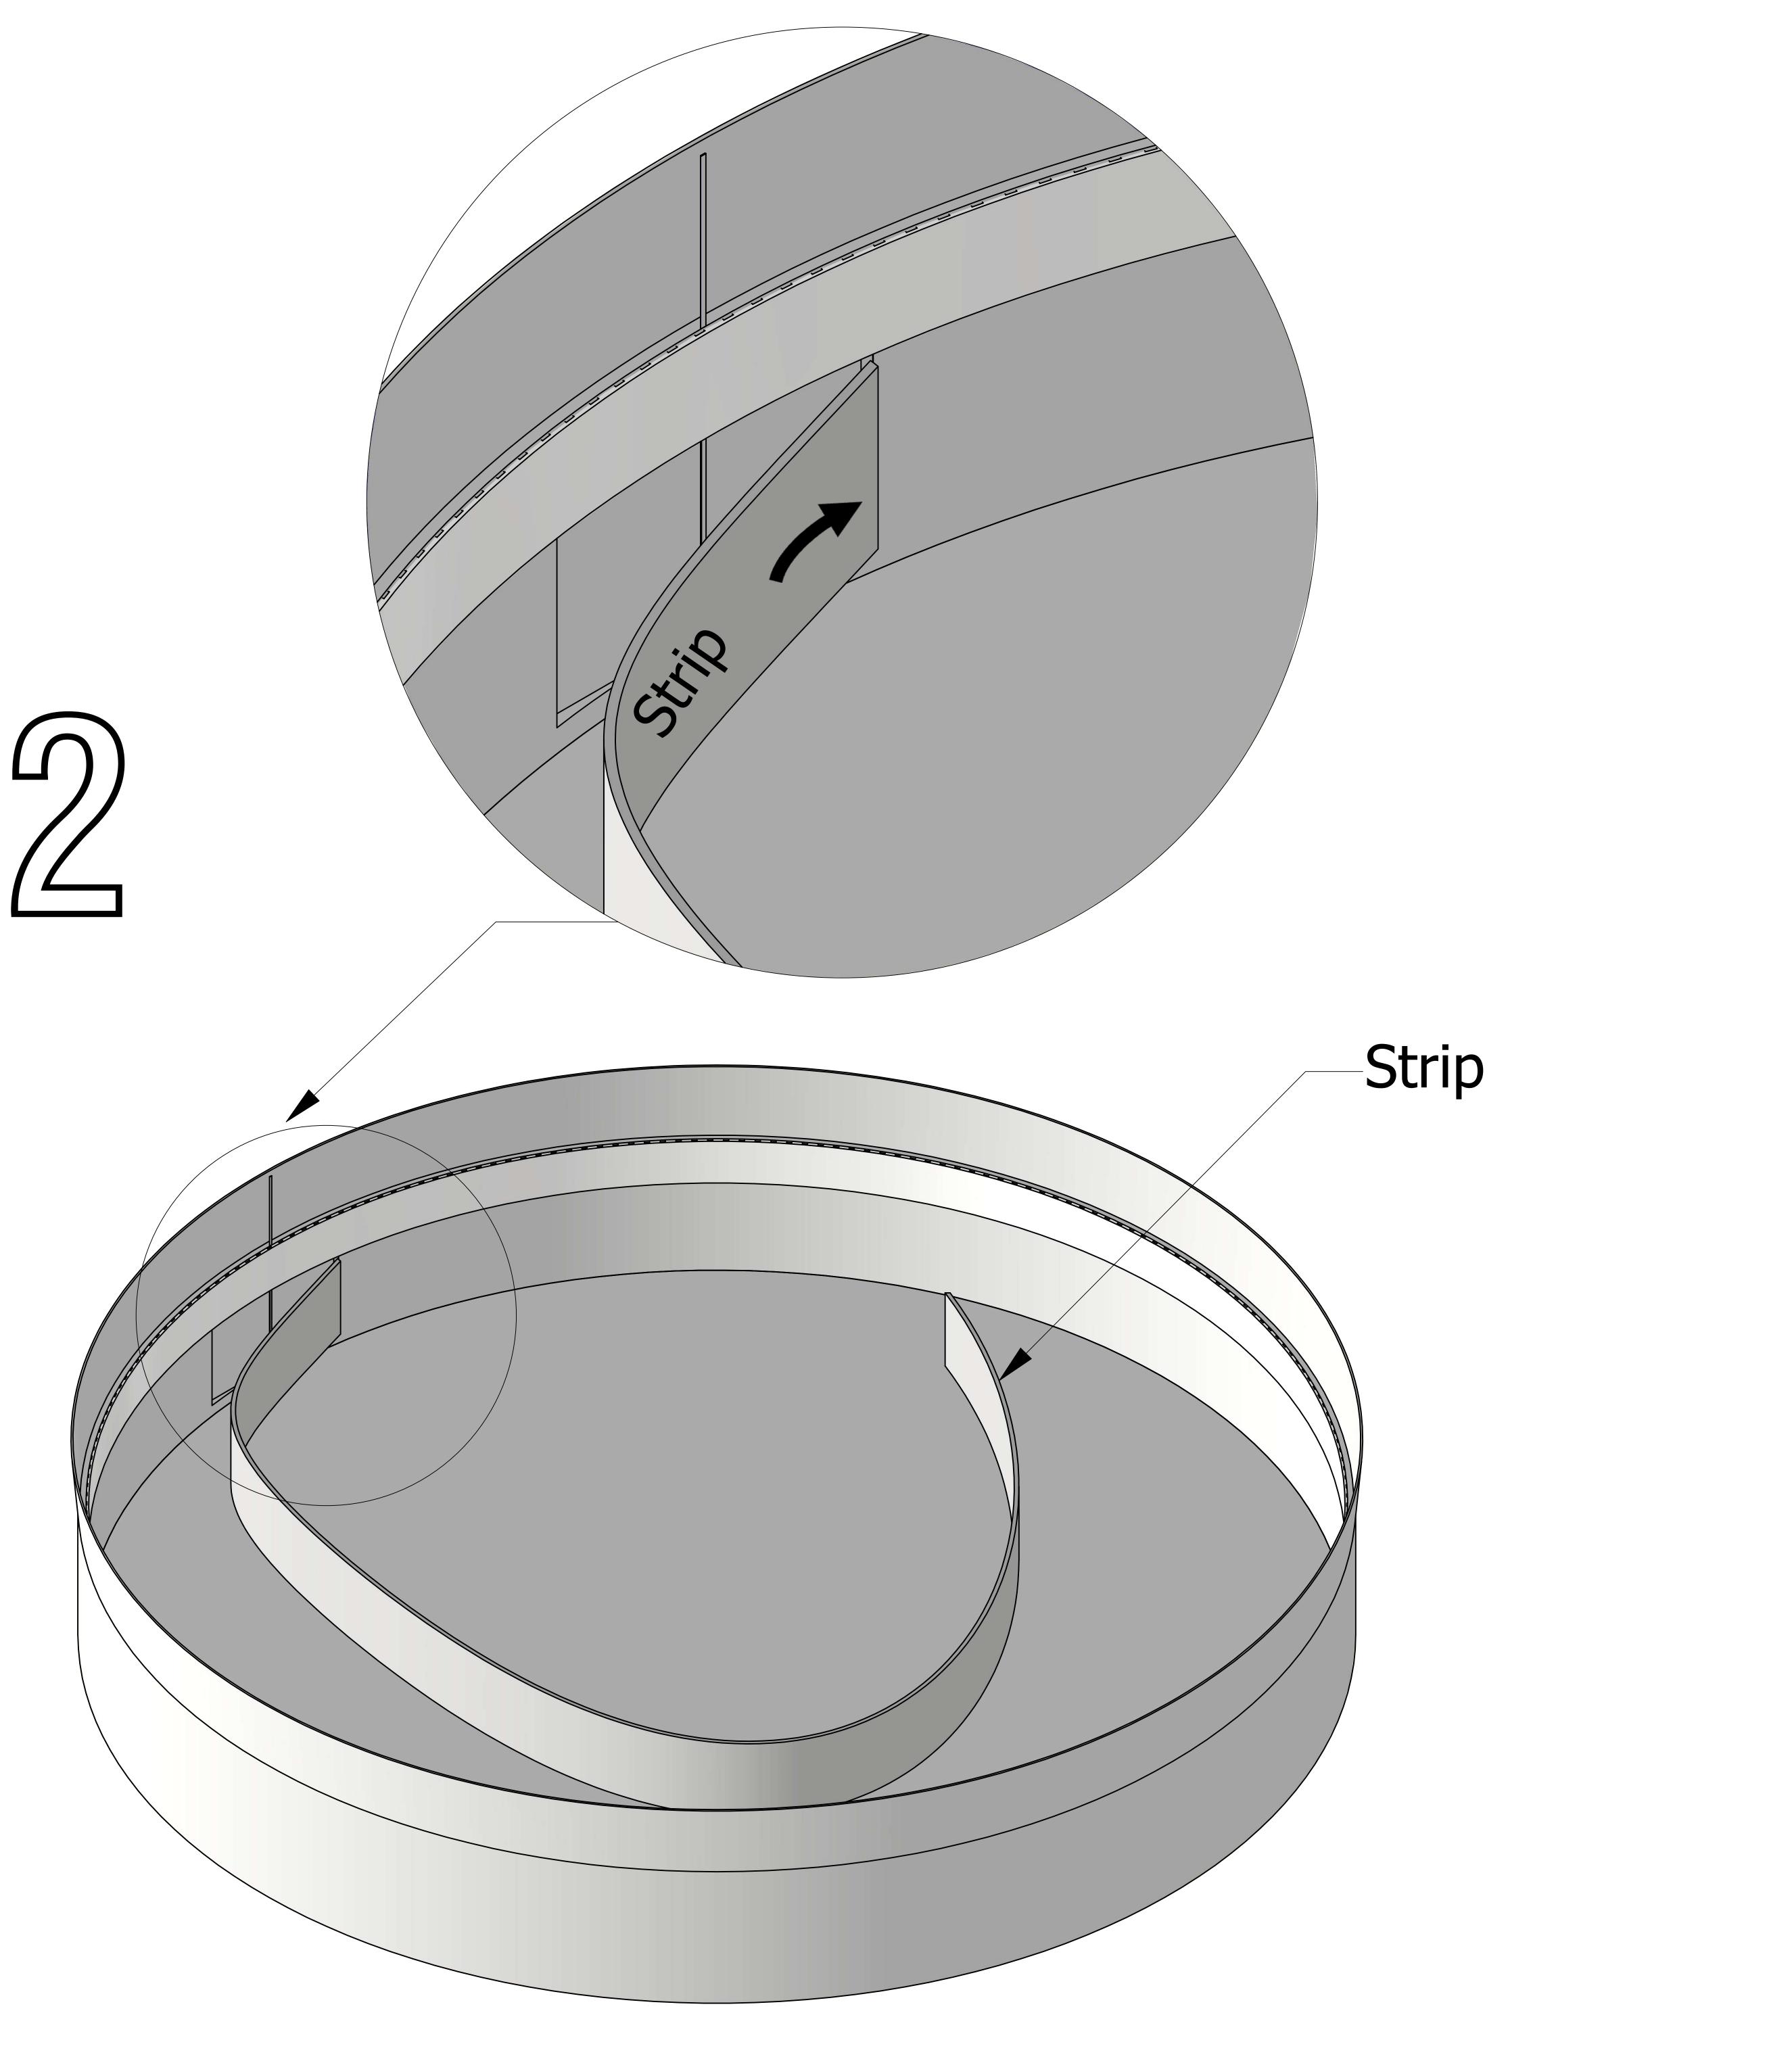


Push the strip in the pocket all around the end cap



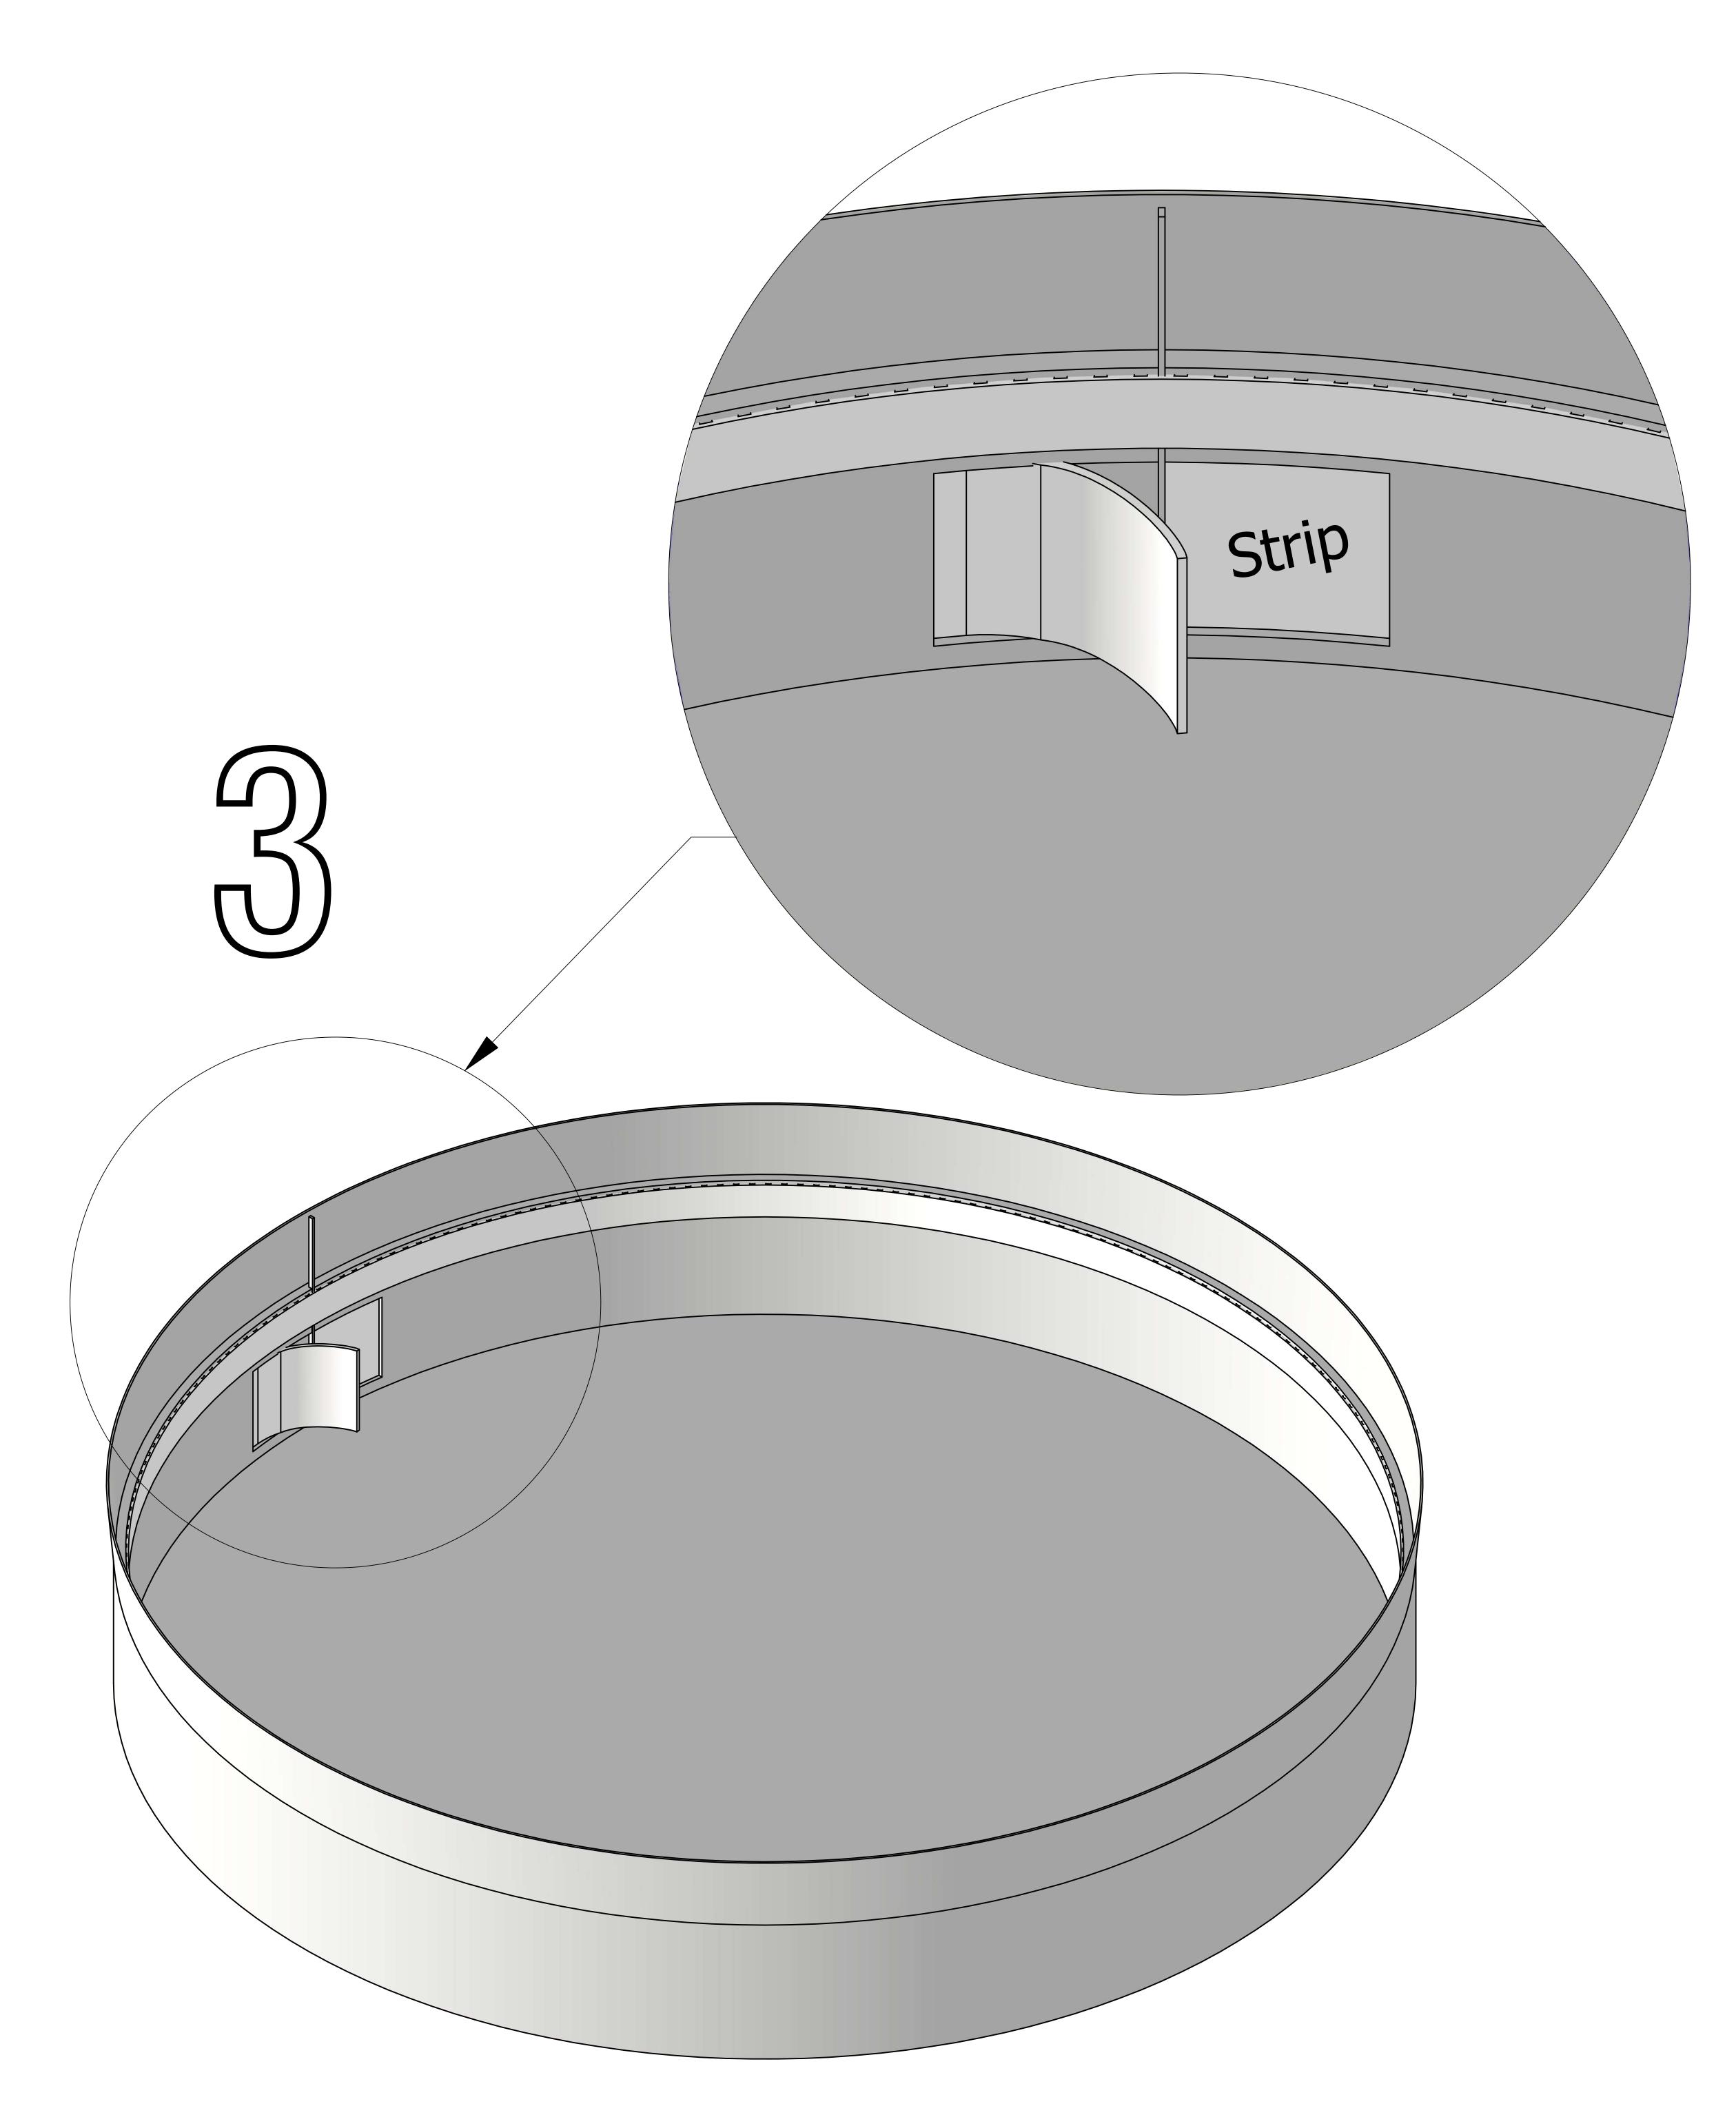

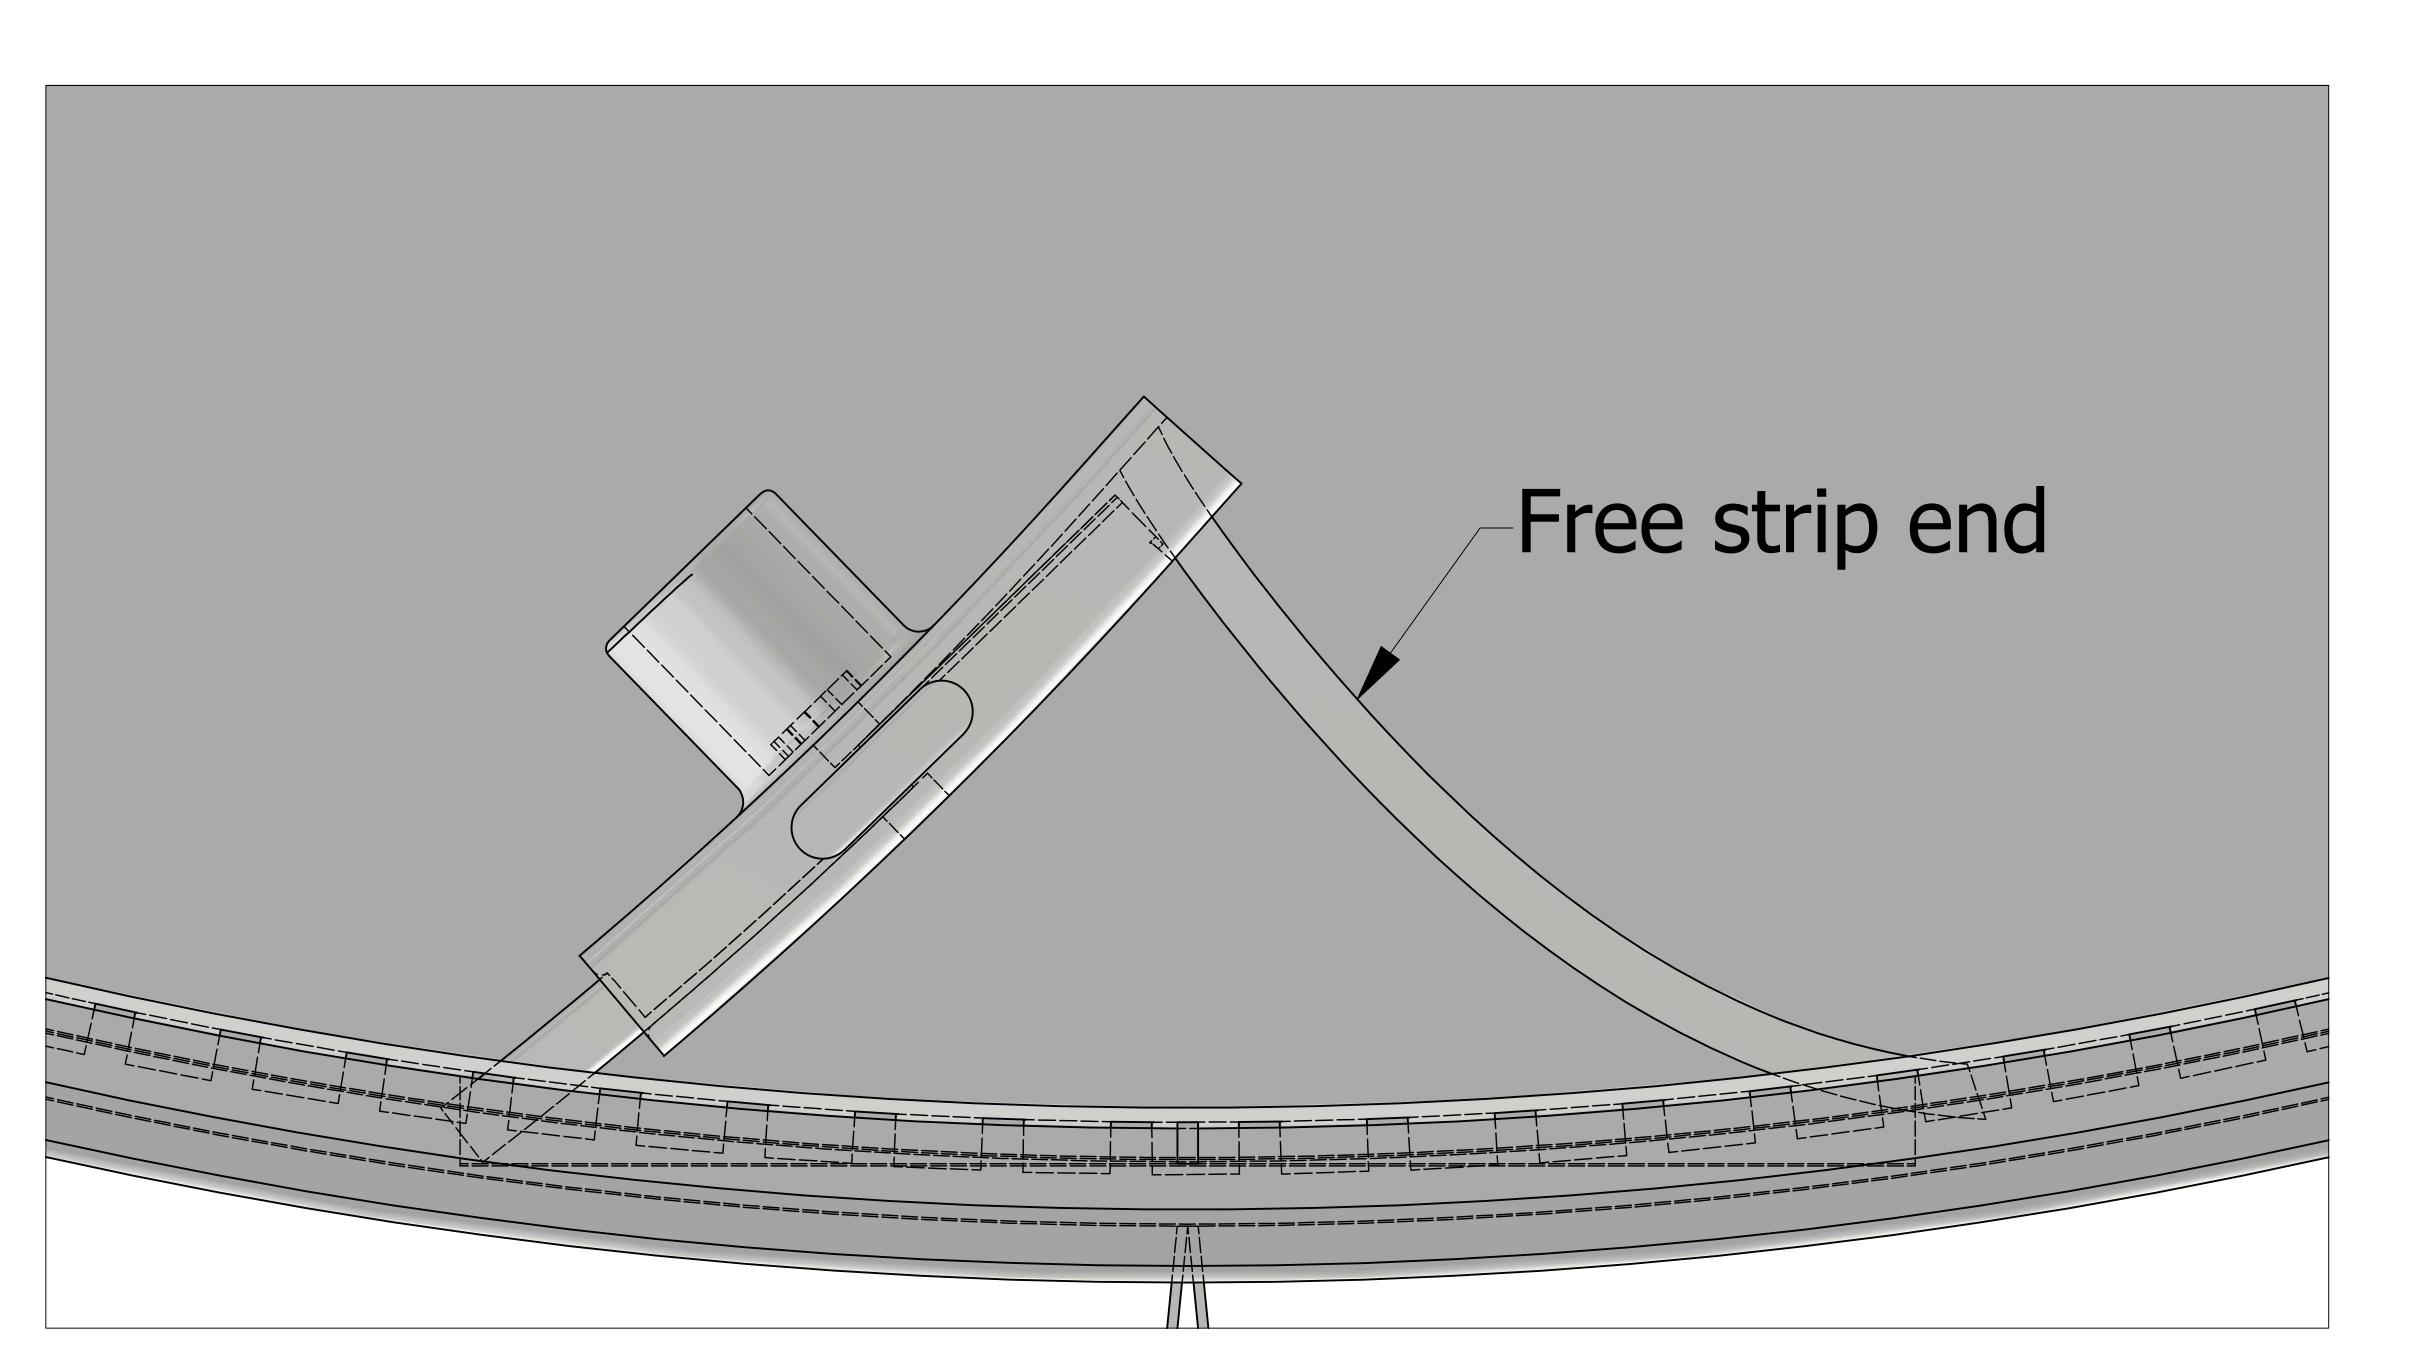


5.1 Place the free strip end in the open slot

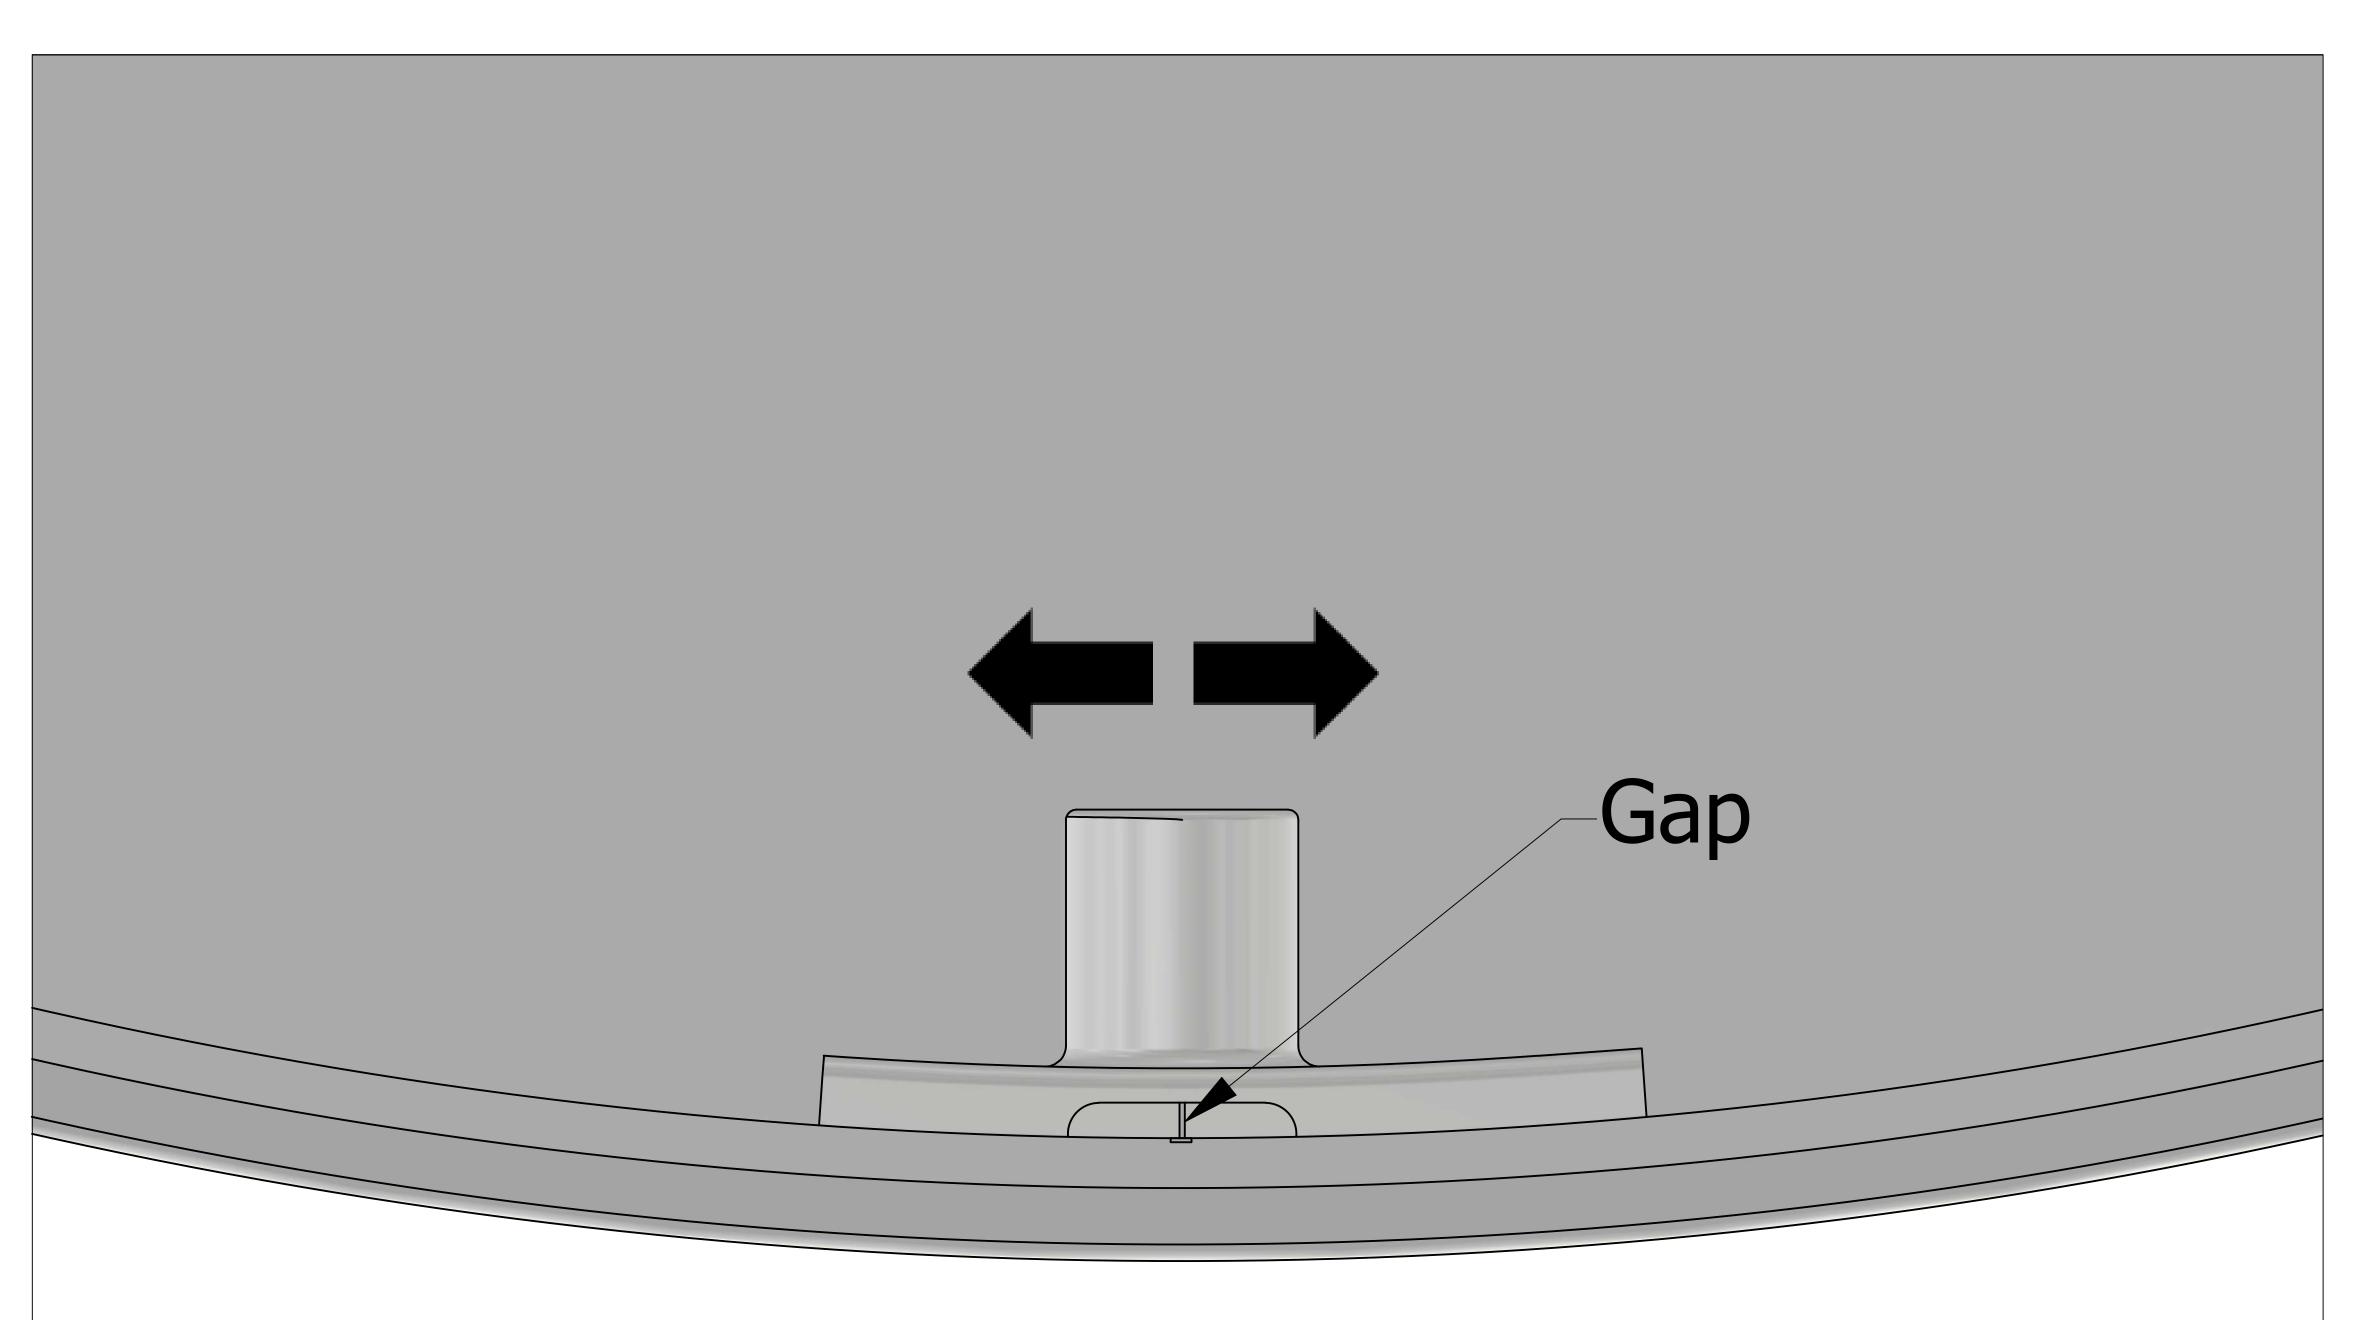

5.3 Using the knob slide the connector and make sure the gap between both strip ends is in the center of the connector

Align one end of the strip with the seam line

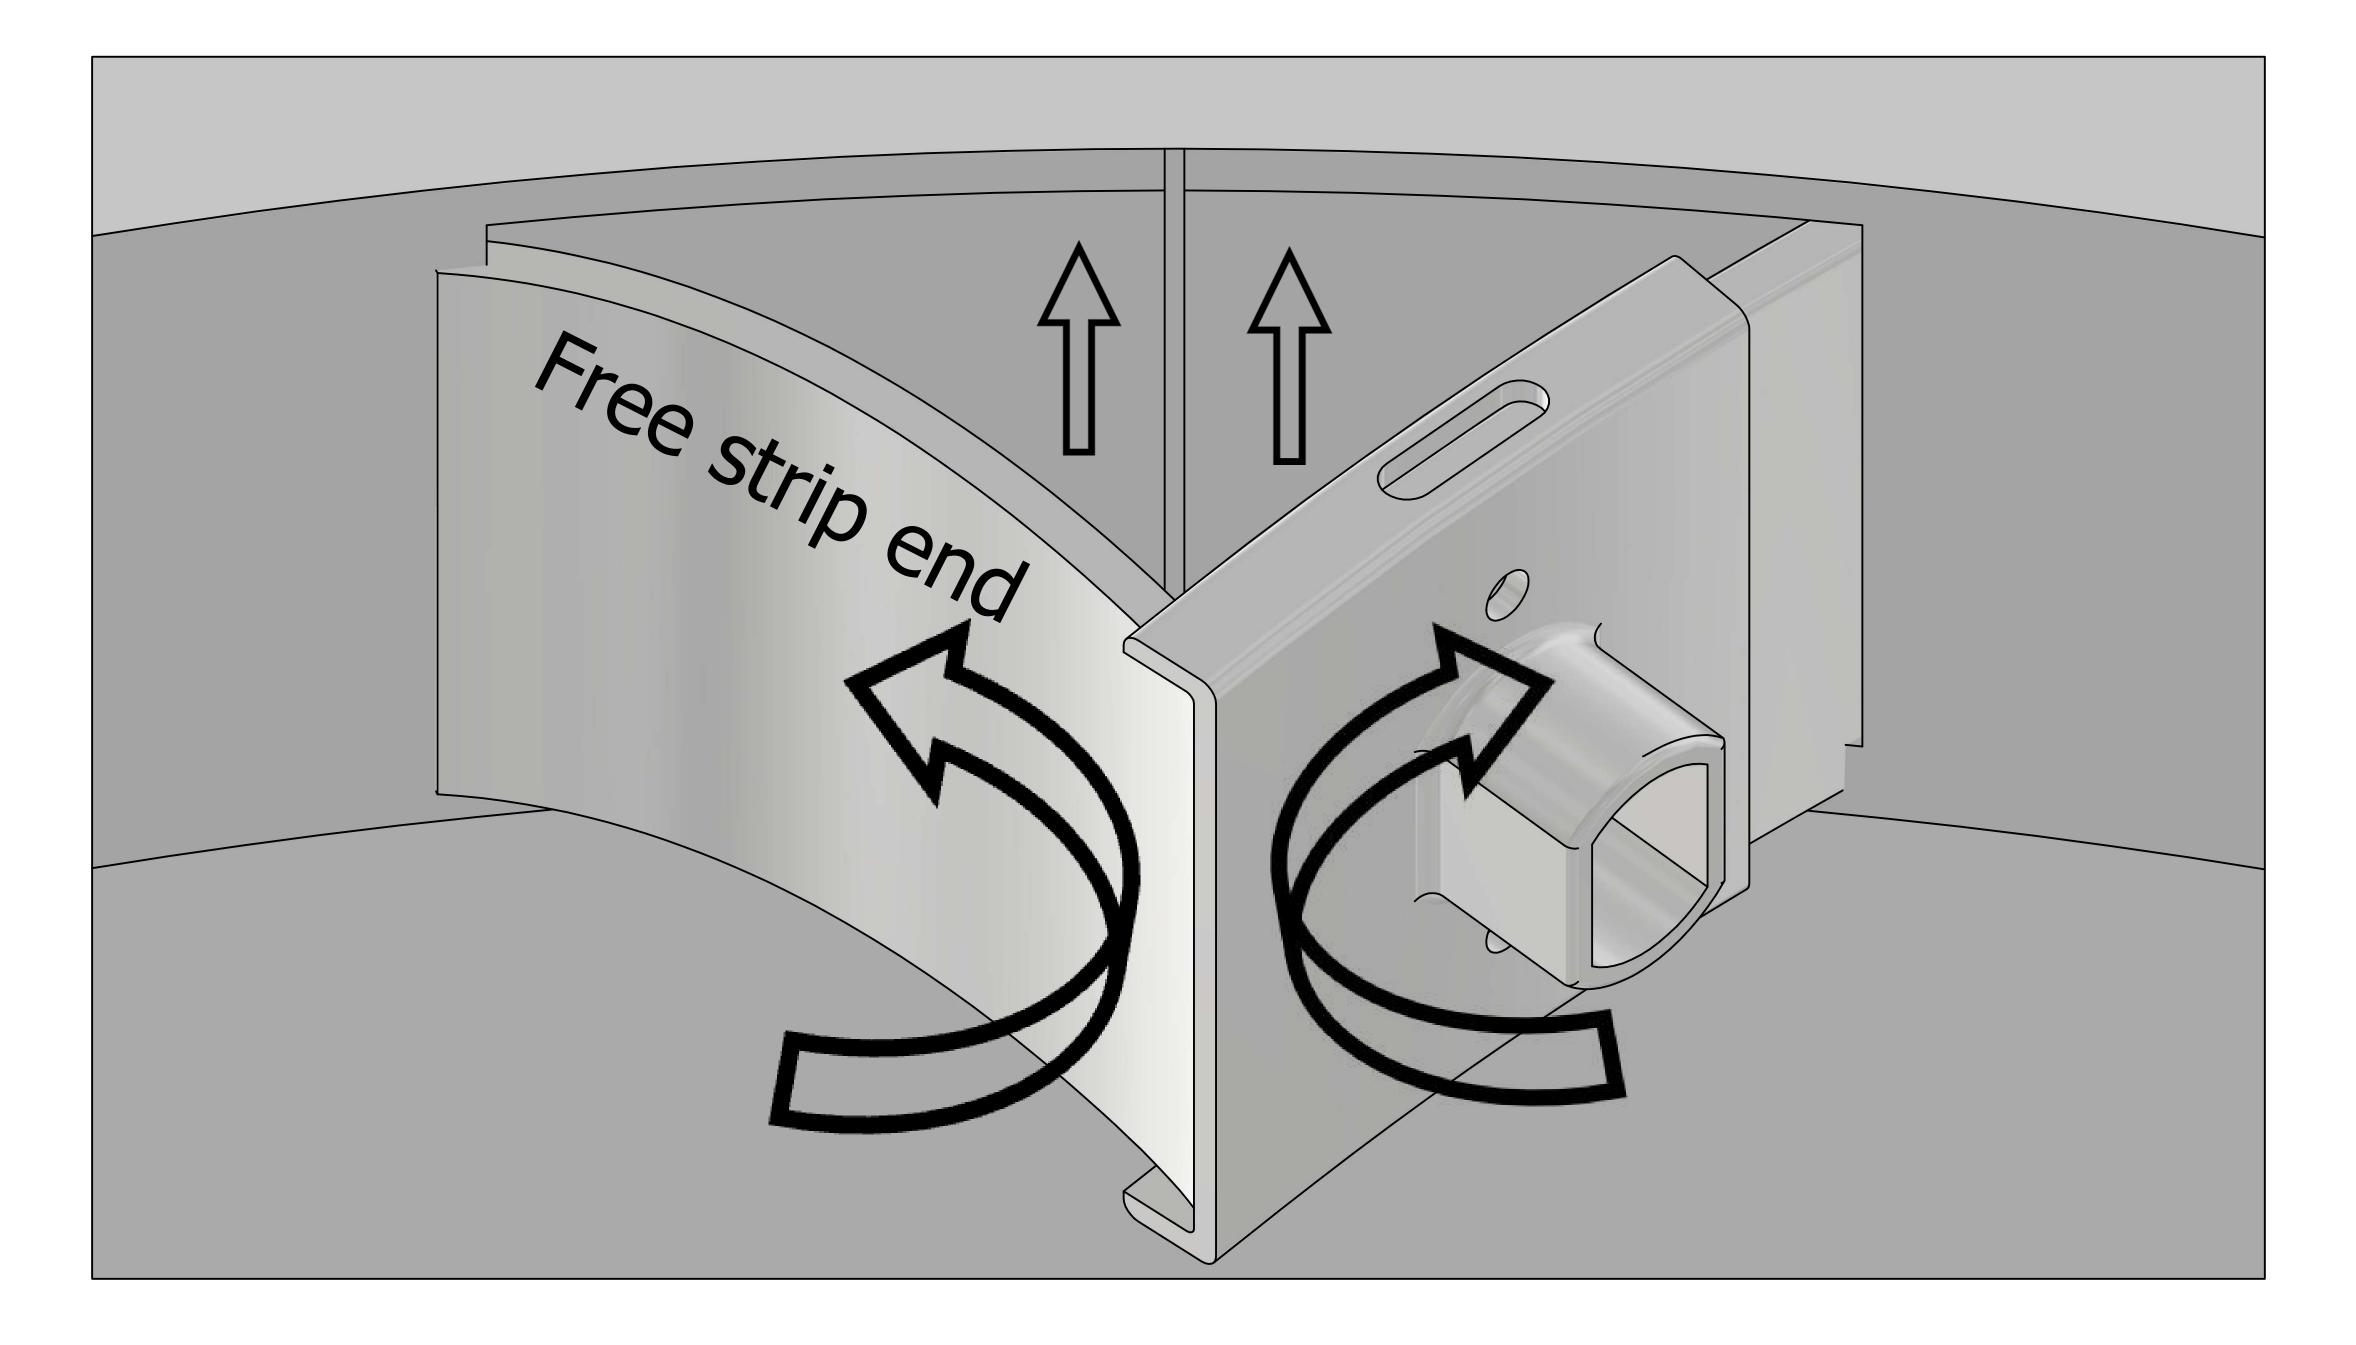

5.2 Hold the connector and the free strip end together and push until both strip ends are aligned